 


Caller ID displays the caller's name and phone number on your television screen.

Go to the Settings icon to turn on and off Caller ID through the Settings/Preference screen. Check the Enable Caller ID box to turn it off and on.



Select the My Library icon then scroll down to Caller ID and highlight it. Highlight the Caller ID log entry to see who has called, their telephone number, date and time of the call. To delete, highlight the listing and press OK.

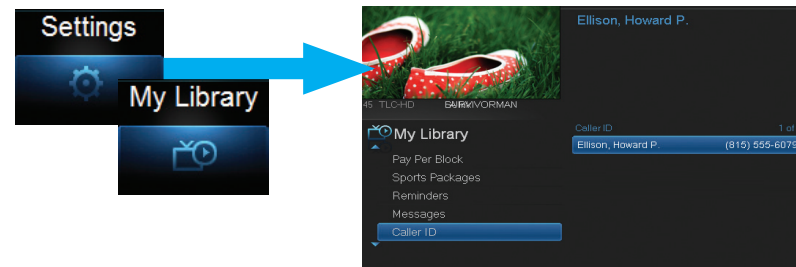

CatchUp TV is handy when you want to watch a TV program you have missed. The CatchUp TV feature provides access to view content recently aired on a CatchUp TV channel. To access, push the Menubar, scroll to the CatchUp TV icon and click OK. There are several steps to set up your CatchUp TV service. Use your navigational arrows to make the selections described below.



Example: select by channel, then by alphabet range according to the names of the set of channels enabled by CatchUp TV (access up to 3 days).

When the channels in the selected alphabet range appear, scroll to the program you would like to watch and click OK. The episode begins playing, and the episode identification appears for a few seconds at the bottom of the screen in the Infobar:



Restart TV: Look for the asterisks next to the channels on the Guide to access Restart TV programs. Then, tune to channel and press OK on remote.

Nova Remote Control

Power

Power on/off for current selected device or standby mode for STB

TV INPUT

Changes TV input device

Device Control

Selects device to control

OPTIONS

Provides options for certain menus or items

BACK

Back one level in menus

EXIT

Exit menu item or back to live TV

VOL

Increase/decrease volume

MUTE

Turns volume on/off

Number Keys

Allows direct access to specific channels and menu items

Dot Key

Reserved

DVR

Connects to DVR service

LIVE TV

Connects directly to Live Television

MEDIA

Short-cut to YouTube

SETUP

Set up remote for TV

Transport Keys

Controls video of LIVE TV, DVR
REPLAY-back 30 seconds
SKIP-ahead 30 seconds

REC

Starts/stops recording

MENU

Display on-screen menu or home screen

INFO

Display information about current program

Navigation

Arrow keys navigate menus, OK executes selected

VOD

Reserved

GUIDE

Display program guide

Shortcut

Reserved

CH/PG

Change channel, or page up/down within program guide

LAST

Change to previous viewed channel

CC

Toggles closed captioning on/off

Tech Support Help Desk:

319.559.2000

Waverly Utilities

www.waverlyutilities.com

Digital TV Quick Guide Brochure Copyright © 2015 MS Communications. IPG screen images Copyright © 2005 - 2016

Minerva Networks, Inc. Used with permission. All rights reserved.

This material may not be duplicated, in whole or in part, by any means, without the express written consent of MS Communications, Ringgold GA 30736 USA.



Quickstart Guide to Digital Video

 


Menubar is a quick way to access most of the features of your service.




Press the Menu button on your remote to display the Menubar. Then use your left and right arrow keys to move the highlight through the menu to select a feature icon. Then press OK to select it. These icons include: Guide, DVR, Pay Per View, VOD, Search, Favorites, My Library, Settings and more.

Infobar is an easy way to find information about the show you are watching, what comes on later, and what is on other channels.

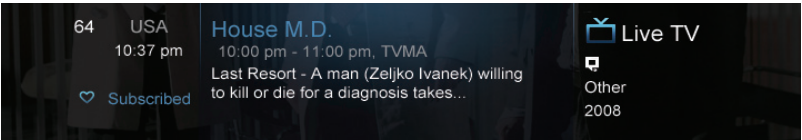

Press Info on your remote to view more information about a program you are viewing. Pressing Info a second time brings up more detailed information. When viewing the Info screen, press the Up and Down Arrows to scroll the Infobar through what is playing on other channels. Press the Right Arrow key to scroll ahead in time.

 Guide is the place to find out what is playing now, what's playing later, where you can set reminders and recordings, and edit your recordings.

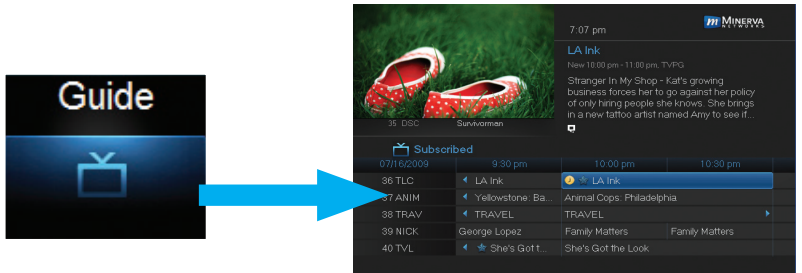

Access Guide from the Menubar or from your remote control.

 
When the Guide is displayed, you can use your remote to tune to channels by entering your channel number(s) on your number keypad. Press the remote Right and Left Arrows to scroll through the Guide forward and backward in time or by pressing the Up & Down Arrows to scroll to different channels.

To tune to a channel while the Guide is displayed, select the channel, press OK

to preview the program on the upper-left corner of your TV screen. Press OK again to tune to the channel.

Recording a program is done in Guide for future programs and from the Record button on your remote for currently playing programs.

Requires DVR capable set-top box.

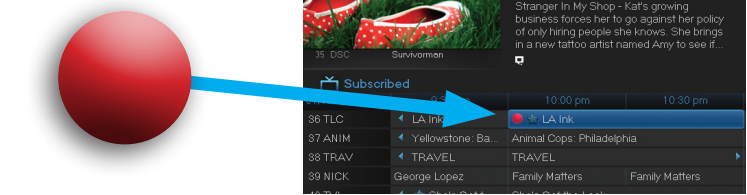


Pull up the Guide, highlight the program listing, press OK and a pop-up menu will appear. Highlight *Record* and press OK. The program listing now shows a red recording symbol.




Go to DVR accessed from the Menubar to review and organize your recordings.

 A Favorites List is a channel line-up you can create of your most watched channels.

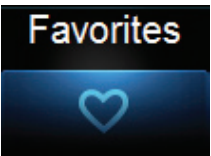


 To create a Favorites list, go to the Favorites icon on the Menubar and choose *Create* from the list. Select the name of the list using the keypad. Press the Right Arrow and then Up/Down Arrows to select a channel you want to add to the list, then press OK. A heart icon appears to the right of the selected channel.

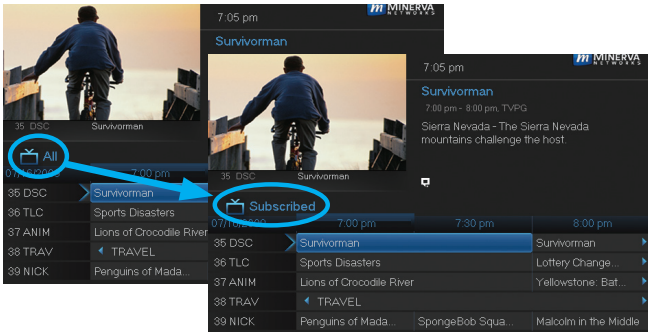

While the Guide is displayed, press the Guide button repeatedly to cycle through the Favorites lists. Example: All – displays all channels, Favorites – displays a list you've created of favorite channels. The Guide will only show the channels of the active Favorites list. Guide Filter includes: All, Subscribed, SD, HD, PPV, and Favorites.


 
Parental Controls and how to use them:

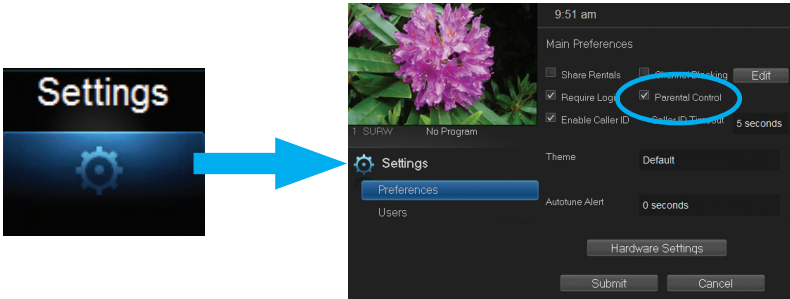

Turning Parental Controls On: Select *Settings* from the Menubar, enter your password to gain access to Settings/Preferences. Arrow to Parental control under Main Preferences, check the Parental Block box and submit. You will be returned to Live TV.

Next, go back through to Settings and User screen. Then Arrow to *Parental Control* and press OK. Set both movie and TV ratings. When complete, Arrow down to *Submit* and press OK to turn on Parental Controls.

  Turning Parental Controls Off: Go to Guide and select the restricted program, highlight and press OK on your remote. A dialogue box pops up that says *Unlock Parental Controls*. Select that and then enter your password to gain access.

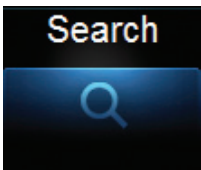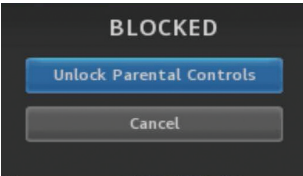

Search allows you to enter the title or partial title of a program or video and find any program matching the text you entered. Go to the Search icon on the Menubar and press OK to bring up Search.

Press OK on the highlighted Search entry field to bring up the keyboard. Use the Up/Down/Left/Right Arrows to highlight the letters on the on-screen keyboard, pressing OK after each letter, to enter your search keyword. When complete, highlight *Done* and press OK. Then, highlight the on-screen *Search* bar and press OK to view your search results.