 


## NAVIGATION MENU

The Menu provides easy navigation to access popular features. Press **MENU** on your remote and use **Arrows** to navigate menu categories.

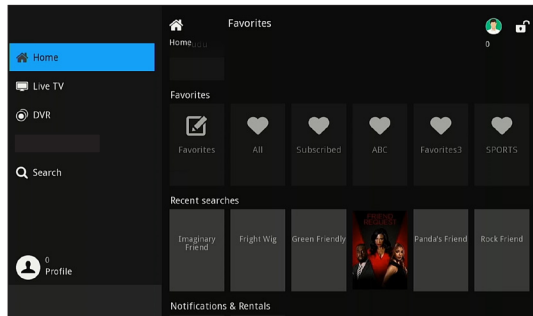

### +NAVIGATE THE MENU

- Arrow over using your **Right Arrow** to access a Menu category and navigate features in available category rows.
- Use **BACK** on your remote to move back to the previous screen within the Menu or **EXIT** to leave the Menu.

### MENU CATEGORIES

**+HOME MENU** Create lists of your Favorite networks, see results from your recent Searches, and view your scheduled Reminders.

 
**+LIVE TV MENU** Quickly scan what programs are live on your Favorite networks.

**+DVR MENU** Watch previously recorded programs or series and edit the schedule of items set to record.

**+SEARCH MENU** Search all programs available on the Guide, On Demand menu and your DVR for a specific program title.

**+PROFILE** Edit Preferences, Users profiles and Hardware Settings.

### +FIND A SHOW OR MOVIE QUICKLY | SEARCH

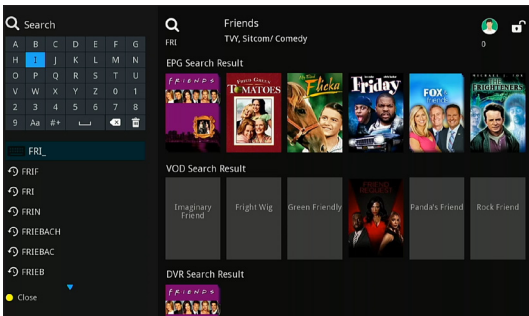

- Press the Yellow Triangle button marked **A** on your remote to access Search and to display an on-screen keyboard.
- Using **Arrows** and **OK** to select, type the title of the program. Press **BACK** if you need to quickly delete a letter.
- Search results from your electronic program guide (EPG) and DVR will populate in category rows.

## REMOTE CONTROL

### POWER/STANDBY

Power selected device on/off

### TV INPUT

Change TV input device

### DEVICE CONTROL

Selects device to control

### OPTIONS

Provides options for TV or other input devices

### BACK

Back one level in menus

### EXIT

Exit menu

### VOL

Increase/decrease volume

### MUTE

Turns volume on/off

### NUMBER KEYS

Allows you to navigate to a specific channel number

### DOT KEY

For future use

### DVR

Displays DVR menu

### LIVE TV

Takes you Live TV

### MEDIA

For future use

### SETUP

Set up remote for TV

### TRANSPORT KEYS

Controls video

REPLAY - back 8 seconds

SKIP - ahead 30 seconds

### REC

Starts/stops recording

### MENU

Display navigation menu

### INFO

Display information about program

### NAVIGATION

Arrow keys navigate menus, OK executes selected

### GUIDE

Displays program guide

### SHORTCUTS

Actions vary, see on-screen prompts for directions

### CH/PG

Change channel, or page up/down within guide

### LAST

Change to previous channel



1002 Adams Parkway  
Waverly, Iowa 50677  
319-559-2000



## PROGRAM GUIDE

The Guide is the best way to scan what programs are available on each channel at a given time. Press **GUIDE** on your remote control to access.



### +NAVIGATE THE GUIDE

- Press the **Up** or **Down Arrows** to view what programs are available on each channel.
- Press the **Left** or **Right Arrows** to view up to 3 days of past and 12 days of future programming.
- Highlight a current program and press **OK** to preview. Press **OK** again to view the program full screen.
- Press **GUIDE** on your remote multiple times to switch the list of available channels to All, Subscribed (channels in your TV package) or any Favorites lists that you create.
- Press **EXIT** to leave the Guide.

## DETAILS SCREEN

The Details screen displays information about a specific program and what actions are available for that program.



 
### +ACCESS DETAILS SCREEN

- While in the Guide, use **Arrows** to highlight a program and press **INFO** on your remote.
- While watching a program press **OK** on your remote.

## +WATCH ON YOUR SCHEDULE | DVR


**WATCH WHAT YOU WANT WHEN YOU WANT.** Record an unlimited number of networks and store up to 150 hours of HD programming for up to 6 months. Recording is available only on shows with \* next to them.

### RECORD A PROGRAM OR SERIES

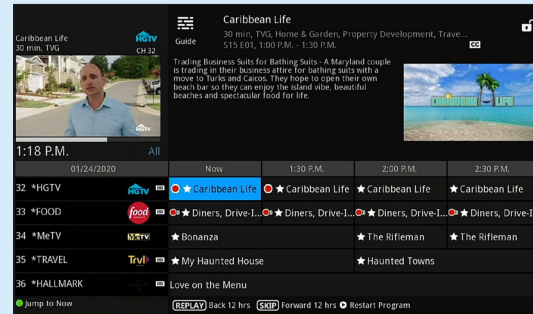

**+RECORD THE REST OF A PROGRAM YOU ARE WATCHING** Press **REC** on your remote while watching live TV.

 **+RECORD A FUTURE PROGRAM** While in the Guide, highlight a future program and press **REC** on your remote. The program listing should now have a red recording symbol.

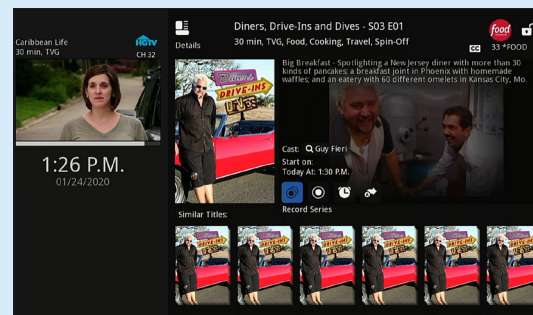

**+RECORD A SERIES** While in the Guide, highlight a future episode of the series you'd like to record and press **OK** on your remote. You'll be taken to the Details screen. Select Record Series. A dialogue box will display. Edit your preferences and select OK.


### RECORDING TIP

 - Many programs run past their allotted time. Record the program immediately following in addition to your program to ensure you capture the end.

### +EDIT SCHEDULED RECORDINGS

- Press **DVR** on your remote and use **Arrows** to navigate to your desired category row.
- To edit a program you set to record, navigate to the To Record category row and select the program. Once on the Detail screen you can cancel the recording or skip a specific episode in a series recording.
- To edit a series recording, navigate to the Series Recording category row and select the series. A dialog box will display and allow you to Edit your recording preferences.

### WATCH A RECORDED PROGRAM OR SERIES

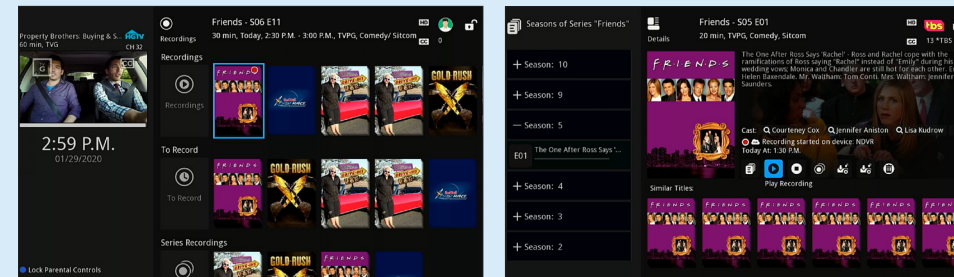

- Press **DVR** on your remote to display the DVR menu.
- In the Recordings category row, use **Arrows** to navigate to the program or series you would like to view and press **OK**. You will be taken to the Details screen. Select Play Recording. Press **STOP** on your remote to exit the recording.

### POPULAR RECORDING ACTIONS

The actions available on the Details screen will vary depending if you have recorded a single program or multiple episodes of a series.

**+HIDE/SHOW EPISODES** Will be available when you have recorded multiple episodes of a series. When Episodes is visible, your series recordings will be sorted by episode number and season (*when applicable*) to allow you to easily navigate to the episode you would like to watch. (*Enter or exit seasons by using your Left and Right Arrow.*)

**+PLAY RECORDING** View the selected episode from the beginning.

**+RESUME PLAY** Will be available when you started watching an episode but have not completed it. Select to pick up where you left off.

**+DELETE RECORDINGS** Your delete recording options will vary depending on the number of episodes you have recorded. You will be able to delete a single episode, a season or a series.

### +CONTROL PLAYBACK | FF REW SKIP REPLAY

- Control the playback of a recording or while using Catch up or Restart: use **FF** or **REW** to move 4, 16, 32 or 64 seconds, **SKIP** to advance 30 seconds at a time, **REPLAY** to replay the previous 8 seconds. **Stop** will exit.

### +WANT MORE INFORMATION | WE'RE HERE TO HELP

TECH SUPPORT OR ADD SERVICE | **319-559-2000**

HOURS | **M-F 7:30 a.m. - 4:30 p.m.**

 
### +NEVER MISS A PROGRAM | CATCH UP & RESTART

With catch up and restart you can restart a currently-airing program from the beginning and access up to 3 days of past programming so you never miss the beginning of your favorite show or last night's big game again.

*Channels with catch up and restart will have an asterisk displayed in the Guide next to the network name.*

### +CATCH UP ON PAST PROGRAMMING

- Navigate to past programming in the Guide by using the **Arrow** keys on your remote. Or press **REPLAY** to jump back 12 hours at a time.
- When you find the program you would like to watch press **OK** to display the Details screen. Select Play From Start to begin the program.

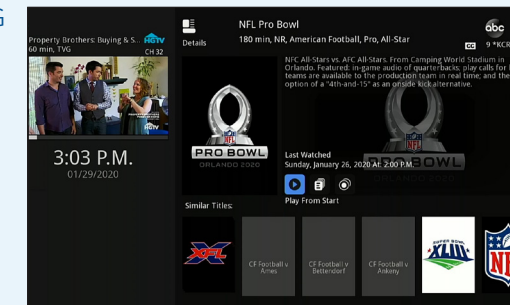

### +RESTART LIVE TV

- Navigate to the current program you want to watch in the Guide by using the **Arrow** keys on your remote.
- Press the **PLAY** button on your remote to restart the program.
- If you are watching a live program you'd like to restart, press **OK** on your remote to be taken to the Details screen. Select Restart TV.

*\*If you are interested in parental controls on our system, please contact Waverly Utilities.*

